

How to insert a liner in the container

Proper insertion of a CDF form-fit liner into a Liquifold bin.



Remove liner from box and place on table



Unfold liner




Open liner, keep dispense fitment towards you

Note: Can also use Liquifold tote lid



Remove bubble wrap from fill and dispense. Attach Liquifold clip to the dispense fitment

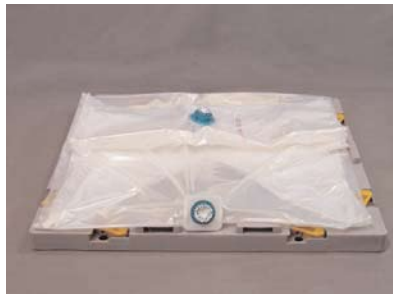

Pull dispense fitment forward



Place liner in container with dispense fitment end in first



Connect clip to Liquifold tote



Attach fill fitment to fill bridge



Tote is ready to fill