




Tote Solutions Ltd.

# Preparing a "Bag in Box" Form-Fit Liner for Filling



- Remove liner from box and place on LiquiFold 315 lid.

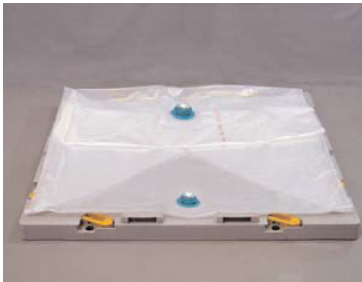

- Unfold liner , keep dispense fitment towards you and attach gland adapter to the dispense fitment.



- Attach grasping tool to gland adapter and place liner in container with dispense fitment end in first and lining it up with the bottom discharge of the LiquiFold 315. Hold the filling fitment up and bring to top of the container.



- Pull grasping tool thru bottom discharge and connect gland adapter to LiquiFold 315 container.





- Install fill bridge across the top of the LiquiFold 315 and attach fill fitment to fill bridge.



- Tote is ready to fill.

