



Tote Solutions Ltd.


Decant Valve Assembly and Install

Constructed with food grade contact approved materials, The **FlexiValve V50 with Pusher Cutter Assembly** is a 2" butterfly valve and pusher cutter to push the crown cutter through the membrane of the liner and allow for efficient decanting.



V50 Valve

NECESSARY ACCESSORIES:

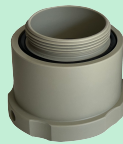

Pusher Cutter Collar



Pusher Cutter




- Remove the Tamper evident discharge seal and unscrew the discharge valve cap from decant gland.



- Remove blue crown cutter from the fitment, rotate and replace into the decant gland with the teeth pointing towards the membrane.



- Attach the pusher cutter collar to the decant gland of the container.

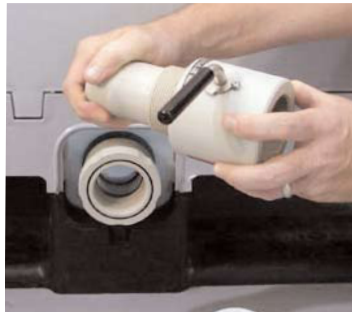

- Thread pusher cutter into the shallow threaded entrance of the FlexiValve.



- Ensure the valve is in the off position and screw the valve pusher cutter assembly into the collar until tight and liner has been punctured. The inner seals will prevent any air ingress or product leakage.



- Container is now ready for dispense. Attach necessary adapter to deep threaded entrance of the valve. Attach decant hose to the adapter. Open the FlexiValve to begin the decant process. Once container is empty the FlexiValve V50 and pusher cutter assembly can be removed and cleaned and ready for reuse.

